


Ref : 1001.25600 **ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS**
Adattabile a – Suitable to : COS. RE Premium Tetto Alto – High Cab

1/3

Premium Previledge

We advise you to but SIKAFLEX 221 or DURAMIX between the roof and middle bracket (not supplied with the kit).

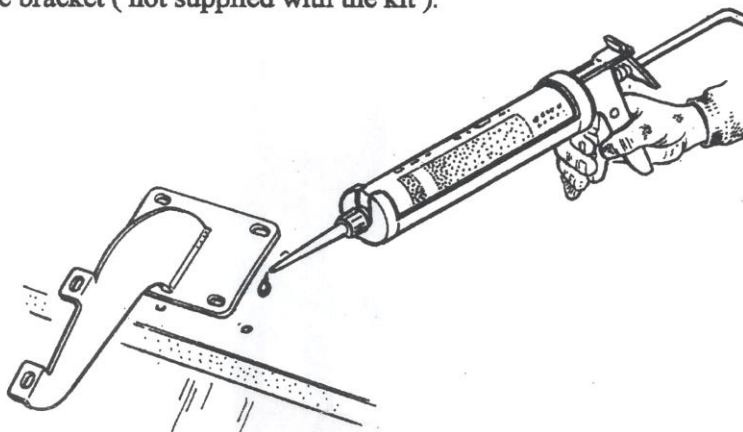

Number	Part Number	pcs
1. Acrylic part	5076	1
2. Middle bracket	3625	3
3. Side bracket left	3624L	1
4. Side bracket right	3624R	1
5/12. Screw 6 x 30	1009	18
6. Cover collar	1203	10
7. Rubber washer 6 mm	1211	10
8. Rubber washer 3 mm	1212	6
9. Washer 6 x 22	1012	18
10. Nylok nut M6	1003	10
11. Rubber wearnut M6	1238	12
13. Rubber coverhat	1202	6
14. Rubber nutcoverhat	1223	4

