


Ref: 1006.97700 **ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS**
 Adattabile a – Suitable to : COS. IV STRALIS S-WAY

Part List

1. Acrylic part	1pc	7. 4,2x14 screw	2 pcs
2. Bracket middle	3pcs	8. M8x20	13pcs
3. Bracket left	1pc	9. Gasket 26x31x2,16mm	13pcs
4. Bracket right	1pc	10. 8x17 washer	13pcs
5. Rubber shim	10pcs	11. Cover hat	10pcs
6. M6x30 Torx	10pcs	12. Cover collar	10pcs
		13. M8 nut	13pcs

1. Brackets assembly to vehicle

Mount the screws (#8) to the vehicle. Place the rubber gasket (#9) between vehicle and bracket. Mount the brackets to vehicle with 8mm washer (#10) and M8 nut (#13).

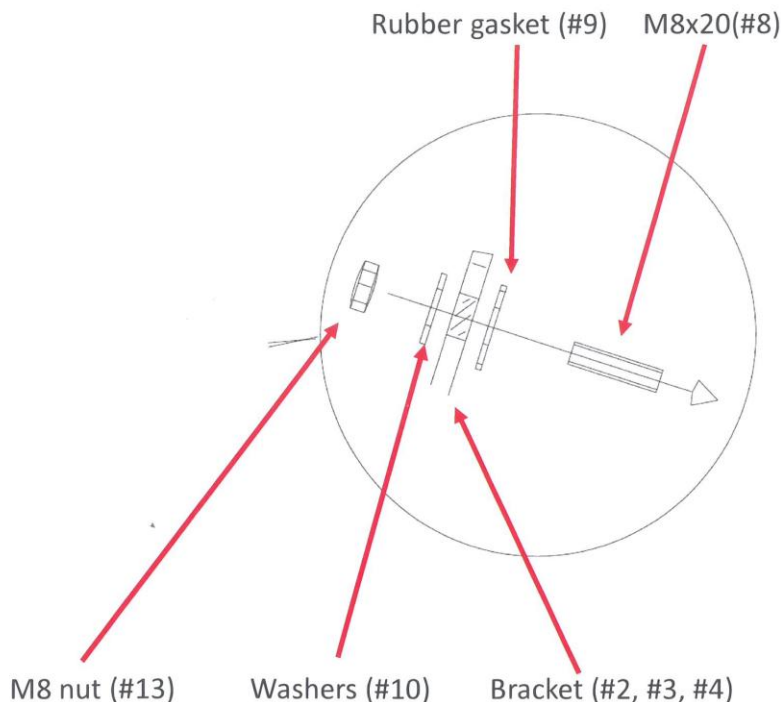

2. Acrylic part assembly to brackets

Place the screws (#6) thru the cover collars (#12) and thru the acrylic part holes (#1). Mount the acrylic part to the brackets and use the rubber shims (#5) between the acrylic part and brackets. Finally mount the cover hats (#11) to the cover collars. Screws 4,2x14 are for the mounting lights.

