


Ref : 903.48000 ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS
Adattabile a – Suitable to : COS. SC R 2017 | SR

1. Porta il veicolo in un luogo asciutto, pulisci l'area di montaggio.

2. Monta il set di viti (6x14mm) nei fori come indicato nella foto (testa esagonale all'interno del deflettore) e segna con un marcatore ad inchiostro o vernice la posizione dei fori di fissaggio.



3. Posiziona il deflettore sull'angolo come vedi nella foto e pressalo contro l'angolo del veicolo. La posizione corretta è mostrata nella foto (20-25mm dal bordo verticale sul lato ed a metà della parte piana del convogliatore).

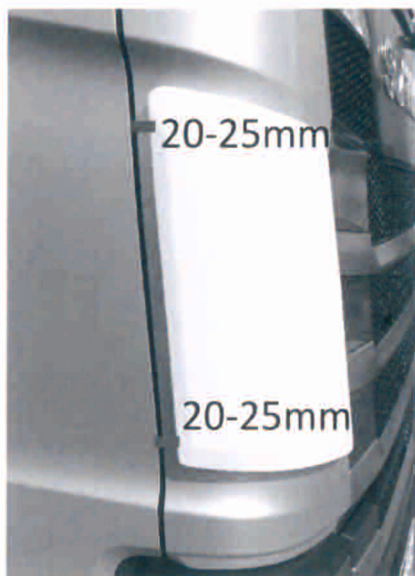

4. Effettuare i fori prima con una punta (3-4mm) successivamente allargarli con una punta da 6,5mm. Pulire i fori e utilizzare un pò di vernice o silicone sui bordi dei fori.

5. Fissare il deflettore sugli angoli con viti e rondelle M6.

6. Rimuovere il foglio di protezione dalla superficie.

Leggere queste istruzioni prima se vuoi verniciare i deflettori!

Il deflettore è costruito in plastica ABS-PMMA, può essere verniciato con vernice a base acrilica. Per verniciarlo rivolgiti prima al tuo fornitore di vernice.

Ricordati di rimuovere il foglio di protezione, prima di verniciare!

Ref : 903.48000 ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS


Adattabile a – Suitable to : COS. SC R 2017 | SR

1. Take your vehicle to a dry place, clean the mounting area and mask tape front corners.

2. Mount the 6*14mm set screws on the holes as shown on the picture (hex head inside the deflector) and put some ink or paint marker on the head of the set screw in order to mark the mounting hole positions.



3. Place the deflector on the corner as shown on the picture and press the part against the corner of the vehicle. The correct position of the part is shown on the picture (20-25mm from the vertical edge on the side and on the middle of the styling groove).

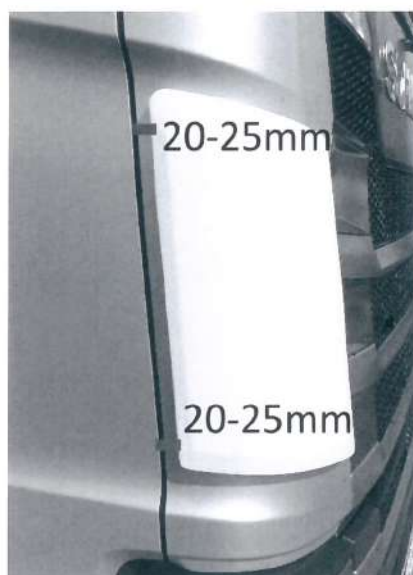

4. Drill the holes first with a smaller drill bit (3-4mm) and then make the holes larger with 6,5mm Drill bit. Clean the holes and place some fixing paint, silicon or sikaflex on the edges of the holes.

5. Mount the dirt deflector on the corners with the M6 screws and washers.

6. Remove the protection foil of the surface.

Read this first if you want to paint the dirt deflector!

The deflector is made from ABS-PMMA plastic, which can be painted with acrylic based paints. For painting ask instructions from your paint supplier for ABS-PMMA material. Remember to remove the protective foil before painting!